


The Wallgate Thrii operational program is supplied factory set but can be adjusted to suit your needs.

LCD Control details

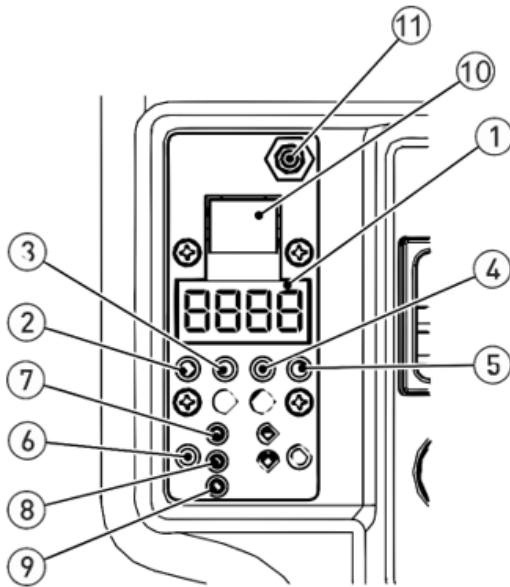

| Item | Description |
|------|------------------------------|
| 1 | LCD |
| 2 | Menu Select Button |
| 3 | Up Button |
| 4 | Down Button |
| 5 | Enter Button |
| 6 | Fan Speed Button |
| 7 | High Fan speed LCD indicator |
| 8 | Med Fan speed LCD indicator |
| 9 | Low Fan speed LCD indicator |
| 10 | Ribbon cable connector |
| 11 | Soap prime switch |

- Hold down button 2 and 5 together to access the 'F' functions number menu.
- The screen will appear with F1.
- Using button 3 (Up Button) select F79.
- Using button 5 (Enter Button) to select the settings.
- Using button 3 (Up Button) to change this to setting '4' and then press button 5 (Enter Button) to confirm settings.
- This will give you the following default settings.

| Program Function | Function No | Default Settings | Setting Range Available |
|------------------|-------------|------------------|-------------------------|
| Water | F1 | 2 | Min 1 sec Max 100 sec |
| Delay | F10 | 1 | Min 1 sec Max 10 sec |
| Soap | F8 | 0.4 | Min 0.1 sec Max 10 sec |
| Delay | F10 | 1 | Min 1 sec Max 10 sec |
| Water | F4 | 8 | Min 1 sec Max 100 Sec |
| Delay | F10 | 1 | Min 1 sec Max 10 sec |
| Hand Drier | F6 | 45 | Min 1 sec Max 100 sec |
| End Delay | F11 | 2 | Min 1 sec Max 10 sec |

If you wish to change the time of the default settings, **using the previous instructions, select the required 'F' function number** then adjust the timings within the available setting range detailed above.